
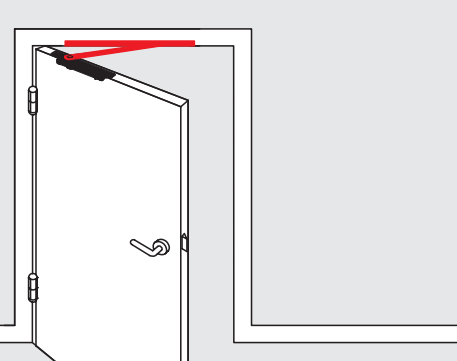
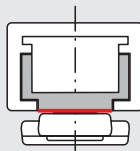
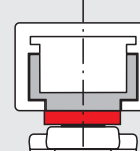
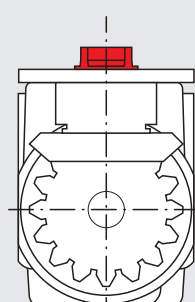
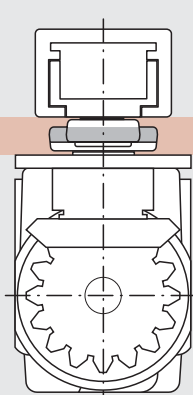
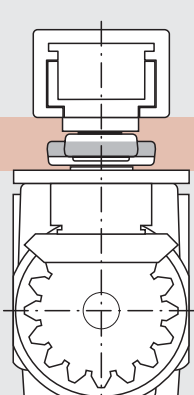
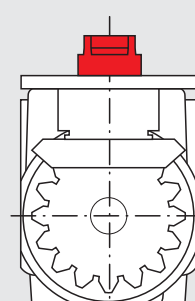
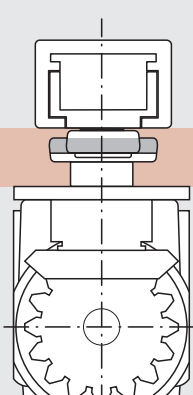
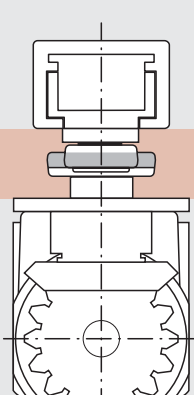
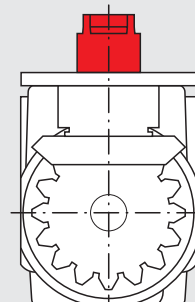
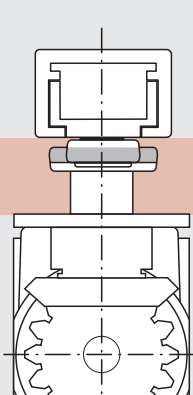


DORMA ITS 96

EN 2-4
EN 3-6

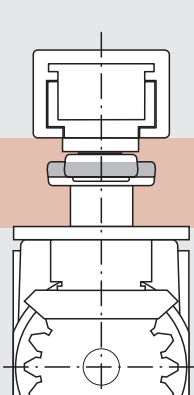

	G 96 N  DIN L 52 00 19 01 DIN R 52 00 20 01  DIN L 52 00 22 01 DIN R 52 00 23 01	
ITS 96 EN 2-4 52 40 01 50 EN 3-6 52 25 01 50 	 X=8,5 A	 X=12 B
ITS 96 EN 2-4 52 41 01 50 EN 3-6 52 26 01 50 	 X=12,5 C	 X=16 D
ITS 96 EN 2-4 52 42 01 50 EN 3-6 52 27 01 50 	 X=16,5 E	 X=20 F